Amphenol SOCAPEX

PS SERIES PSVHP30 VPX PS ENERGY STORAGE MODULE

No external cap requiredHolds at least 30W for 50ms

Special Features

- Miniature size
- High efficiency
- Wide input range
- Fixed switching frequency
- External Synchronization (250 \pm 10 kHz)
- EMI filters included
- Indication for Input failure and Hold-Up activation
- Internal capacitor stores at least 1.5 Joules.
- External capacitor connection option for additional Hold Up time.
- Operates together with Amphenol Source standard DC/DC converter modules. Consult factory for applications.

Environmental Conditions

Meets or exceeds MIL-STD-810C

Temperature:

Operating: -55 °C to +85 °C (baseplate) Storage: -55 °C to +125 °C

Vibration level:

Up to 9 g rms. *Consult factory if higher levels required.*

Reliability

Minimum 150,000 hours. Calculated IAW MIL-STD-217F Notice 2 at +85 °C baseplate, Ground Fix conditions.

Electrical Specifications

DC INPUT

Normal input voltage range:

18 to 48 V_{DC}

Input transient protection:

No damage due to abnormal voltage surge IAW MIL-STD-1275A (100 V for 50 ms) and IAW MIL-STD-704A (80 V for 0.1 s)

Steady-state input current:

< 50 mA

EMC:

Designed to meet* MIL-STD-461F

CE101, CE102, CS101, CS114, CS115,

CS116, RE101, RE102, RS101, RS103

Isolation:

Input to Case: 200 V_{DC}

<u>DC OUTPUT</u>

Output current capacity:

12 A max. Consult factory if higher current required.

Isolation:

Output to Case: 200 V_{DC}

* Compliance achieved with 5µH LISN shielded harness and static resistive load.

Markets & Applications




Military, Ruggedized



Telecom, Industrial Hold-up module

Typical Connection Diagram

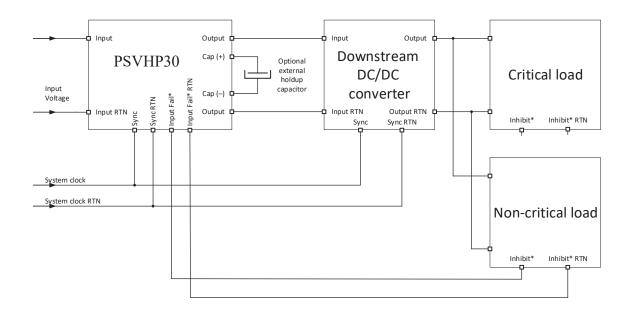

Description of Operation

This energy storage module should be installed in front of a wide input voltage range DC/DC converter, and not as a standalone. The module provides input voltage for the downstream DC/DC converter when a power failure occurs, such that if the input power returns to normal range within a specific period of time, the downstream DC/DC converter (and therefore the load) can't tell that a power failure had happened.

This unit is designed to be used with most of Amphenol Source's DC/DC converters and DC/AC inverters (consult factory for applicability to specific models).

During normal operation, an internal converter charges the internal capacitors (and external, if connected) to 48 to 52 V.

In case the input voltage falls below 16 V, the input is disconnected from the output via an internal MOSFET switch, and the caps are connected to the output pins through another internal MOSFET switch. The caps are then naturally discharged into the cascaded power supply, until the caps have been depleted to a level that the voltage is below the cascaded power supply's under-voltage lockout threshold (for Amphenol Source's converter this value is usually between 16V to 18V).

When input power returns (it can happen during cap discharge or after complete loss of power), the MOSFET switches disconnect the output from the caps, reconnect the input to the output, and the internal converter recharges the caps, preparing them for the next power failure.

Ó


Pin Assignment

Connector type: M55302/61-A30 or eq.

Mates with: M55302/66-30H (22 AWG crimp removable contacts) or M55302/62-A30M (solder cup contacts) or eq.

Pin No.	Function	Р	
1	INPUT FAIL*	+	•
2	INPUT FAIL* RTN	_	•
3	EXT CAP RTN	-	
4	EXT CAP	+	•
5	OUTPUT	+	•
6	OUTPUT	+	•
7	OUTPUT	+	0
8	INPUT	+	•
9	INPUT	+	•
10	INPUT	+	•
11	INPUT RTN	-	•
12	INPUT RTN	-	٠
13	INPUT RTN	_	•
14	OUTPUT RTN	-	•
15	OUTPUT RTN	_	•

Pin No.	Function	Р	
16	SYNC	+	0
17	SYNC RTN	_	•
18	EXT CAP RTN	_	•
19	EXT CAP	+	0
20	OUTPUT	+	0
21	OUTPUT	+	0
22	OUTPUT	+	0
23	INPUT	+	•
24	INPUT	+	•
25	INPUT	+	•
26	INPUT RTN	-	•
27	INPUT RTN	-	•
28	OUTPUT RTN	_	•
29	OUTPUT RTN	_	•
30	OUTPUT RTN	-	•



Signals Description

INPUT FAIL (pin 1)

This signal is used to communicate an input voltage failure condition. Signal type is open collector of a PMBT2222 bipolar transistor. FAIL:

<u>Condition</u>: Input voltage was within normal range and dropped below 17.6 \pm 0.5 V. <u>Result</u>: The pin will be pulled down to **INPUT FAIL RTN** pin through a 6.2 Ω resistor.

NORMAL:

<u>Condition</u>: Input voltage returned to above $17.6 \pm 0.5 \text{ V}$.

<u>Result</u>: The pin will go into high impedance mode (OPEN).

If this function is not required, leave this pin unconnected.

This signal is referenced to *INPUT FAIL RTN* (pin 2)

<u>SYNC</u> (pin 16)

This signal is used to synchronize the internal switching converter's frequency to external clock. Valid external clock frequency is 250 kHz \pm 10 kHz; Valid duty cycle: 50 \pm 10%

When no external clock is present, the power supply uses its internal clock.

If this function is not required, leave pin unconnected.

This signal is referenced to SYNC RTN (pin 17)

EXT CAP (pins 4 and 19)

Connect these pins to external capacitor for increased holdup time.

Unless specified otherwise in the specific variant's catalog page, the voltage at these pins is set to $51 V_{DC}$. These pins are referenced to *EXT CAP RTN* (pins 3 and 18).

INPUT (pins 8, 9, 10, 23, 24 and 25)

Connect these pins to the input power source.


These pins are referenced to INPUT RTN (11, 12, 13, 26 and 27) and OUTPUT RTN (pins 14, 15, 28, 29 and 30)

OUTPUT (pins 8, 9, 10, 23, 24 and 25)

Connect these pins to the downstream Amphenol Source DC/DC converter. These pins are referenced to **OUTPUT RTN** (pins 14, 15, 28, 29 and 30) and **INPUT RTN** (11, 12, 13, 26 and 27)

۲

Outline Drawing

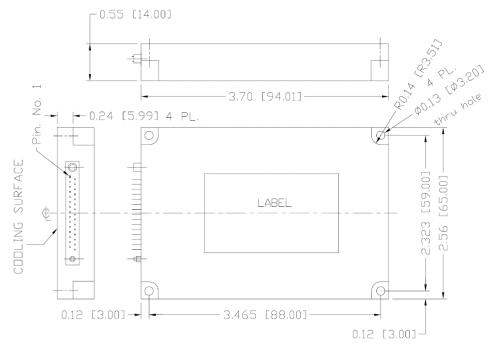

<u>Notes</u>

- 1. Dimensions are in Inches [mm]
- 2. Tolerance is: .XX \pm 0.01 in .XXX \pm 0.005 in
- 3. Weight: TBD

Note: Specifications are subject to change without prior notice by the manufacturer