Amphenol SOCAPEX



> 10 minutesThermally controlled fan speed, to reduce noise & increaseCharge time from depleted to
full capacity (0°C to +40°C): < 6
hoursThermally controlled fan speed, to reduce noise & increaseBattery life expectancy: at least
1000 cycles.Thermally controlled fan speed, to reduce noise & increase
reliability.
Can operate with reduced performance in case of fan failure.
Fan assemblies are user replaceable.

Markets & Applications



Military, Ruggedized



www.amphenol-socapex.com Due to technical progress, all information provided is subject to change without prior notice Designed by Amphenol Socapex

Amphenol SOCAPEX

Protections ⁴

<u>Input</u>

- Under Voltage Lock-Out Input stage shuts down when input voltage falls below 80 V_{RMS}
- Surge Suppressor Protection against fast transients
- Catastrophic Failure Protection

20A circuit breaker on input line, to protect the user's system in case of internal failure.

<u>Output</u>

- Overvoltage Protection Output shuts down if output voltage exceeds a preset value due to internal failure.
- Current Limiting Current waveform is clamped (~21Apk@115V_{RMS}), and the output current shape will be a sinewave with a "flat top", approaching a square wave at short circuit.
- Short Circuit Protection At high overload/shortcircuit, the output hiccups several times. If the high loading/short persists, the output will be shut down.

<u>General</u>

- Over Temperature Protection
- UPS shuts down individual modules if their internal temperature exceeds a preset threshold. UPS resumes operation automatically upon cooldown.
- Charger/discharger
 disconnects the battery if its
 temperature exceeds a
 preset threshold. In this case,
 the UPS continues operation
 without backup.
 Charger/discharger resumes
 normal operation
 automatically upon battery
 cool down.
 Battery Management System
- Overcharge: Electronically disconnects the battery if overcharge state is detected.
- LVD: Electronic Low Voltage Disconnect if battery voltage drops below preset threshold.
- Over Temperature: Electronically disconnects the battery if the internal temperature exceeds a preset threshold.


Environmental Conditions	
Designed to meet MIL-STD-810G	
<u>Temperature</u>	<u>Altitude</u>
Methods 501.5 & 502.5	Method 500.5
Operating: -20 °C to +50 °C (ambient)	Procedures I – up to 40,000 ft. (non-
Charging: 0 °C to +40 °C (ambient)	operational)
Storage: –30 °C to +60 °C (ambient)	Procedure II – up to 30,000 ft. (operational)
<u>Humidity</u>	<u>Salt Fog</u>
Method 507.5	Method 509.5
Up to 95% RH	
<u>Vibration</u>	<u>Fungus</u>
Method 514.6	Method 508.6
Category 24 (IAW Figure 514.6E-1)	
General minimum integrity exposure	
1 hour per axis.	
<u>Shock</u>	<u>Sand & Dust</u>
Method 516.6	Method 510.5
20g, 11ms terminal peak saw-tooth	Procedures I & II

Acceptance Test Procedure (ATP) & Environmental Stress Screening (ESS)

All units go through standard ATP and 24 hours burn-in.

In addition, ESS (random vibration and thermal cycling) tests can be performed on each unit – please contact factory for further details.

Simplified Block Diagram

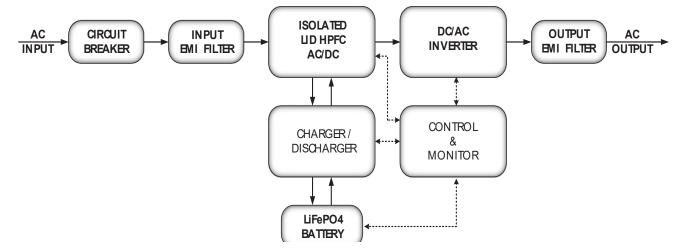

Front Panel Layout

● • • • • • • • • • • • • • • • • • • •	MILPOWER	() () ()
ANUTOUTPUT BATT LOW OVER FAAA FAAB FAR ANUTOUTPUT BATT LOW OVER FAAA FAAB FAR ANUTOUTPUT BATT FAB FAR FAR FAR	SOURCE M1012 UPS	۲
	1.25 kW / 1.5 kVA	•

Switches

Name	Description
PWR	Turns UPS ON or OFF
(Toggle switch)	
	Silences active audible alarm
Multifunction (Momentary push button)	 Turns output voltage OFF (Charge-only mode)
(Momentary push button)	• Prepares the UPS for battery hot-swap (disconnects battery pack)

Indications

Name	Description
INPUT OK	Input voltage in range
OUTPUT OK	Output voltage in range of nominal value
BATT IN USE	Battery discharging (UPS provides backup)
LOW BATT	Battery discharged to below 20% of full capacity.
OVER TEMP	Internal temperature exceeds a preset threshold.
OVER TEIVIP	Indication resets when internal temperature drops back to normal
FAN A/B FAIL	FAN A / FAN B does not operate normally.
FAIL	General failure.

Back Panel Layout



Switches

Name	Description
AC INPUT ON/OFF	250V / 20A circuit breaker. Connects the UPS to the input voltage line and provides overload
	and short circuit protection against internal failures.

Connectors

Designation	Name	Description
11	INPUT	Input voltage connection.
J1	INPUT	Single-phase, 85-265V _{rms} , 47-63Hz / 400Hz
		Remote communication, telemetry and control over RS-232
J2	RS-232	protocol.
		Remote controlled standby mode (via dry contact).
		The UPS can be configured to operate in parallel with other UPSs in
J3	CSC/3PC	current share mode, or in a 3-phase connection, by connecting an
		appropriate cable to this connector.
		Output voltage connection.
J4	OUTPUT	Single-phase, 115/230Vrms, 50/60/400Hz/Other (depending on
		model)
J5	ETHERNET	Remote communication, telemetry and control, over Ethernet
CL	EINERNEI	protocol.

Ò

Pin Assignment

J1 – INPUT connector

Connector type: D38999/20WD5PN or eq.

Mates with: D38999/26WD5SN or eq.

Pin No.	Function
А	GND
В	Neutral
С	Neutral
D	Line
E	Line

J2 – RS-232 connector

Connector type: M24308/23-39F or eq.

Mates with: M24308/4-3F or eq.

Pin No.	Function
1	N/C (for future use)
2	N/C (for future use)
3	N/C (for future use)
4	RMT_OUT_SHDN
5	RMT_SHDN
6	Rx
7	N/C (for future use)
8	N/C (for future use)

Pin No.	Function
9	N/C (for future use)
10	N/C (for future use)
11	Тх
12	5V_SIG
13	SIGNAL RTN
14	N/C (for future use)
15	RMT_SHDN_RTN

۲

J3 – CSC/3PC connector

Connector type: DD15M3000C-15 or eq. **Mates with:** DD15S1000C-15 or eq.

Pin No.	Function
1	AC_OFF_OUT
2	SET_SLV
3	PH_SLV_CFG
4	CRNT_SHR_OUT
5	CRNT_SHR_OUT_REF
6	AC_OFF_IN
7	SYNC_IN
8	CRNT_SHR_IN

Pin No.	Function
9	SET_PH0
10	SET_PH1
11	SYNC_OUT
12	CRNT_SHR_IN_REF
13	SIGNAL_RTN
14	SLV_D_P
15	SLV_D_N

J4 – OUTPUT connector

Connector type: D38999/20WD5SN or eq. **Mates with:** D38999/26WD5PN or eq.

Pin No.	Function
А	GND
В	Neutral
С	Neutral
D	Line
E	Line

Functions

Pure Sine-Wave Output Voltage

The UPS employs a double-conversion online topology. In this topology, the output voltage is ALWAYS generated inside the UPS, whether the input power is available or not.

This means that the load does not suffer from common problems of grid or generator connected loads, such as surges, sags, brown-outs, spikes, frequency transients and high harmonic content. This also means that the transfer from grid to battery backup, and vice versa, is seamless.

Backup

The UPS contains a plug-in, hot-swappable, LiFePO₄ Battery Pack (MPS P/N PSIBAT2), that provides, when fully charged, at least ten minutes of backup operation at full load when ambient temperature is between 0°C to +50°C, in case of input power loss. Operation at lower temperature down to -20°C is possible with reduced load.

Current Share

This connector is used to connect a stack of up to six (6) UPS devices in parallel, in order to enable load current sharing. (Modification can be made to enable stacking of more than six UPSs. Please contact the factory for more details).

See parallel connection scheme in the PSIPD User Manual.

3-Phase Configuration

This connector is used to connect three units, in order to enable 3-phase connection, to support 3-phase loads of up to 1.25kW/1.5kVA per phase.

See 3-phase connection scheme in the PSIPD user manual.

Load Gauge

The UPS provides a ten-level load gauge, visible on the front panel and through the telemetry communication channels.

Battery Fuel Gauge

The UPS provides a ten-level battery fuel gauge, visible on the front panel and through the telemetry communication channels.

<u>Alarm</u>

The UPS provides alarms for various events, that can be viewed on the front panel and audibly heard. The alarms can also be viewed through the telemetry communication channels.

Cooling


The UPS uses two internal fans to cool itself during operation. The fans speed is determined by the internal temperature.

A fan failure is a rare event. The fan's expected life is 40,000 hours @ 60°C ambient, or 70,000 hours @ 40°C ambient. However, if this failure occurs, please replace the fan as soon as possible. A spare part can be purchased from us for this purpose (MPS P/N PSIPD-3901). Please refer to PSIPD User Manual for maintenance instructions.

In case of a fan failure, the appropriate FAN FAIL LED will light up on the front panel, and an indication will appear through the remote communication channel. The UPS will not shut down due to the fan failure itself, but it may shut down due to internal over temperature, that can occur at high power levels and within the normal ambient temperature range.

۲

Outline Drawing

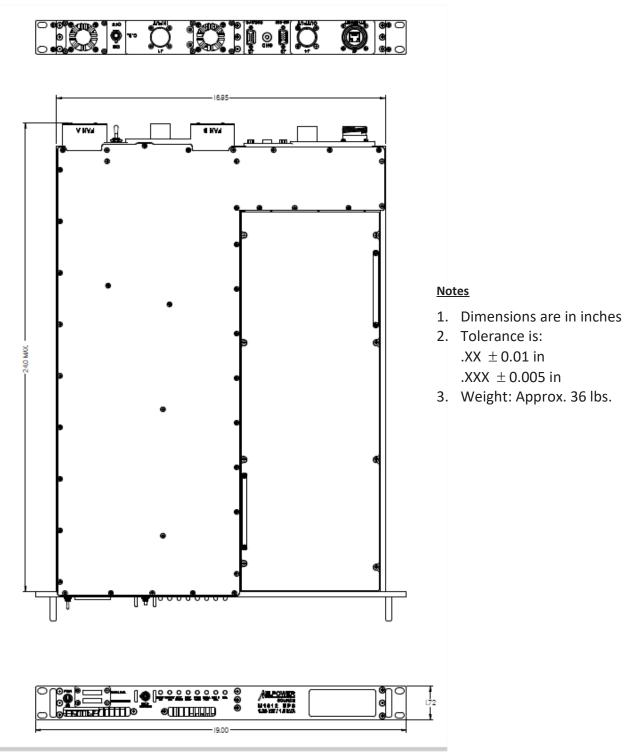

Note: Specifications are subject to change without prior notice by the manufacturer

Ð

Designed by Amphenol Socapex

We reserve the right to modify our products in any way we deem necessary. Any duplication is prohibited, unless approved in writing.